



Primo Ager WiFi Connection Instruction with (ESP SoftAP Provisioning App)



Model: [PA-400](#)



Model: [PAG-400](#)



Contents

Introduction	3
Step 1: Installation of the App	4
Step 2: Run the App to connect WiFi.....	5
2A: Android Phone.....	5
2B: iPhone.....	7
Step 3: Check: WiFi connection indication on Primo Ager display	9



Introduction

This instruction briefly describes the steps for Primo Ager WiFi connection with native **ESP SoftAP Provisioning App**.

Notes:

If you have the Primo Ager mobile app, please follow your Primo Ager app.

If not, please follow the following steps to install and connect your Primo Ager to your WiFi router and Internet.



Step 1: Installation of the App

- A) Android Phone
- B) iPhone

A) Android Phone

Go to Google Play Store, search for App “ESP SoftAP Provisioning”



Or visit the URL below:

<https://play.google.com/store/apps/details?id=com.espressif.provsoftap>

Find and install the App.

B) iPhone

Go To Apple App Store, search for App “ESP SoftAP Provisioning”



Or visit the URL below:

<https://apps.apple.com/in/app/esp-softap-provisioning/id1474040630?platform=iphone>

Find and install the App.




Notes:

Not the “ESP BLE Provisioning” App. That one is for Bluetooth connection.



Step 2: Run the App to connect WiFi

2A: Android Phone

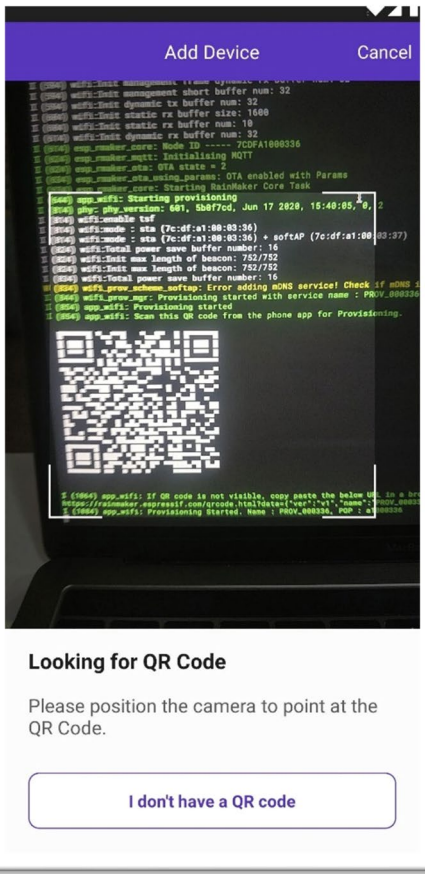


<p>S</p> 		
<p>Step1: Start the App on your phone, and press button to Provision New Device</p>	<p>Step 2: On Primo Ager touch display, go to WiFi setup Page, press Setup button</p>	<p>Step 3: Use the App to scan the QR Code on touch monitor.</p>






<p>Step 4: Press CONNECT on phone App</p>	<p>Step 5: Choose your WiFi SSID and enter your WiFi Password</p>	<p>Step 6: Wait to show above screen. Also, your touch monitor will show the WiFi Connection icon in colour Red.</p>



2B: iPhone

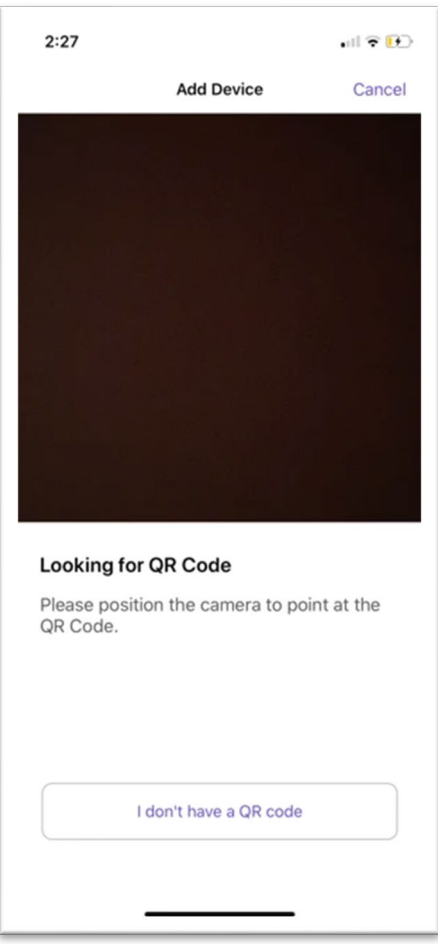
		
<p>Step 1: on your iPhone, start the App, and press button “Provision Device”</p>	<p>Step 2: On Primo Ager touch display, go to WiFi setup Page, press Setup button</p>	<p>Step 3: Use the App to scan the QR code on the touch monitor, from step 2</p>

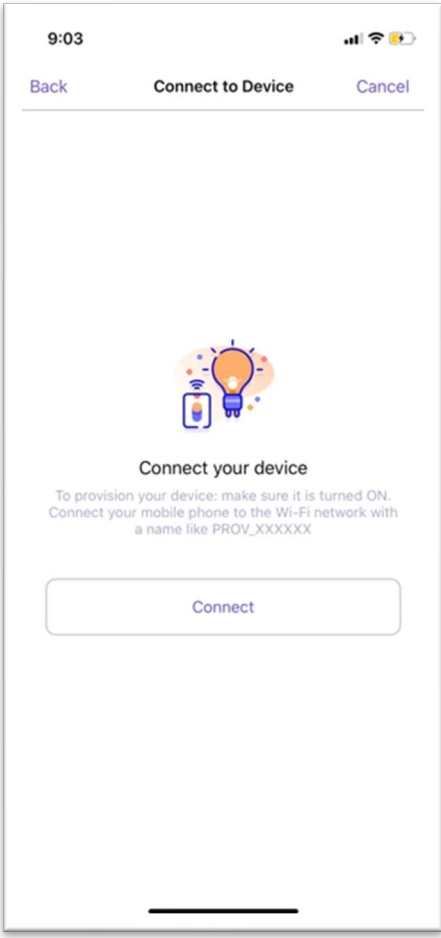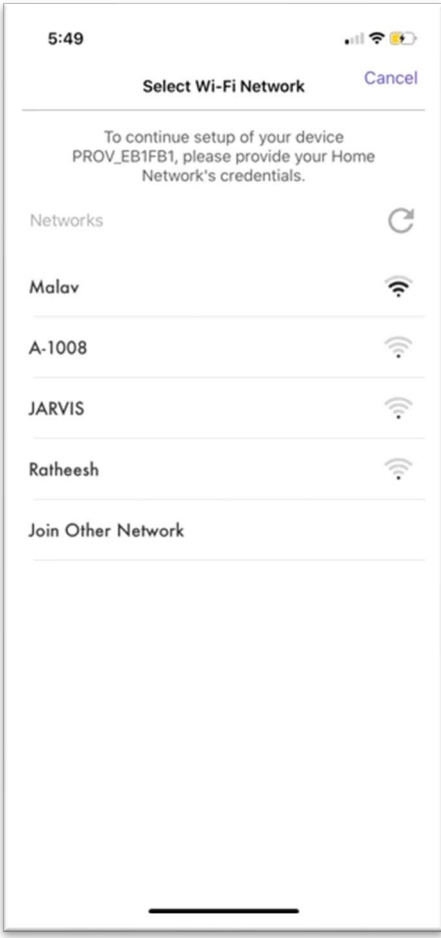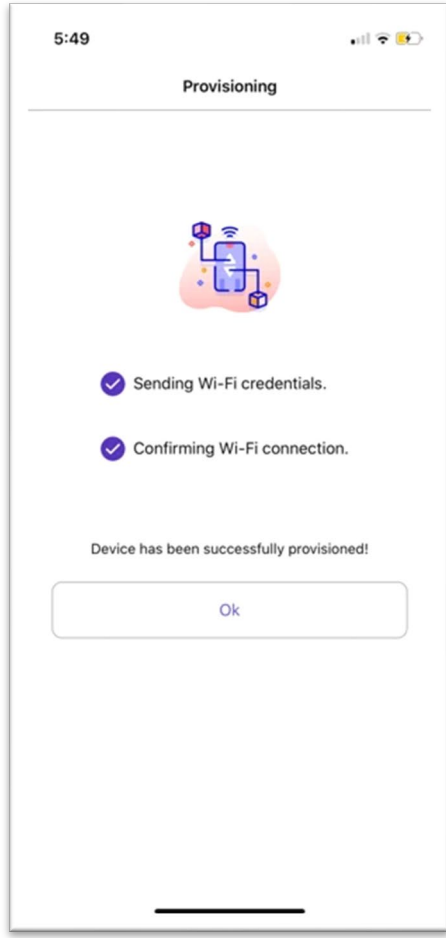

		
<p>Step 4: Press button “Connect” to connect to your Primo Ager</p>	<p>Step 5: Choose and select your WiFi SSID, and enter your WiFi password</p>	<p>Step 6: Wait to show above screen. Also, your touch monitor will show the WiFi Connection icon in colour Red.</p>



Step 3: Check: WiFi connection indication on Primo Ager display

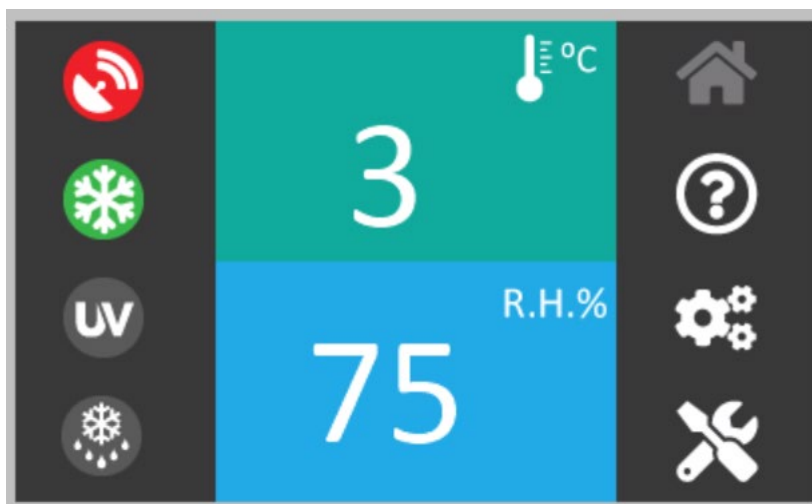

After WiFi and Internet connected, your Primo Ager will show the Red WiFi connection icon, as the left top one.